

OPERATING INSTRUCTIONS
APPLICATION: ALL MODELS

By JES Innovations, Inc.


Visit our website at <http://www.xtremegate.com>.

SLIDE-OUT TRUCK BED
ASSEMBLY

XGW-0002U

XGN-0004U

PATENTS PENDING

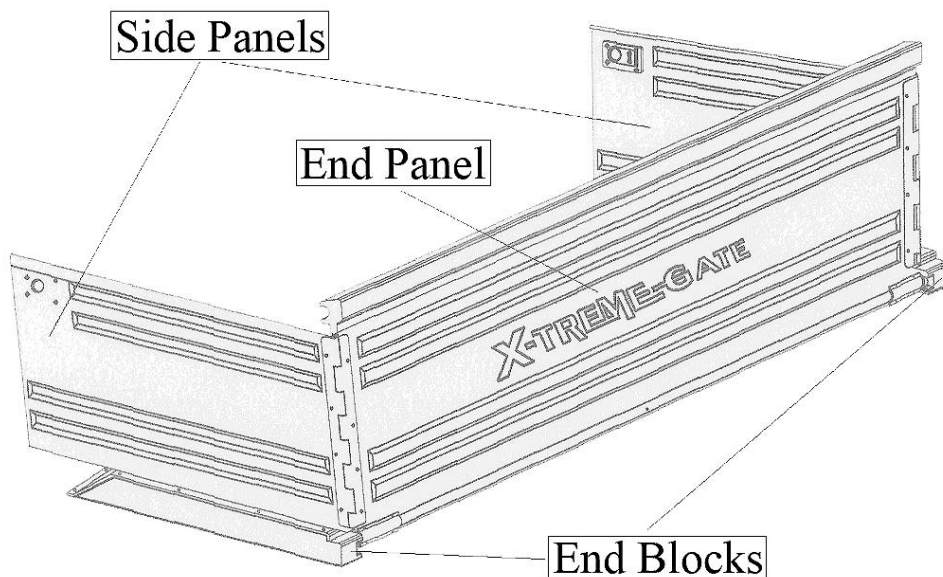

Deploying the X-TREME GATE Slide-Out Truck Bed Extender:

- STEP 1. Open the tailgate and slide the extending panel out of the housing (to the rear like a drawer).
- STEP 2. Raise the side panels to a vertical position.
- STEP 3. Raise/rotate the panels up and forward until the end panels rest on the housing.
- STEP 4. Slide the spring loaded sliding portion of the retainer clip to the rear and slide the retainer clip hole over the retainer/striker post and release the clip.
- STEP 5. Repeat on the other side.



Fig. A



Fig. B



Fig. C

Stowing the X-TREME GATE Slide-Out Truck Bed Extender:

- STEP 1. Open the retainer clip by compressing the spring loaded mechanism and remove the side panel from the retainer/striker post and release the clip
- STEP 2. Repeat on the other side.
- STEP 3. Lay the side panels on the end panel.
- STEP 4. Slide the extending panel completely back into the housing.
- STEP 5. Close the tailgate.



Fig. A



Fig. B



Fig. C

Please refer to the X-Treme Gate Website for additional support at <http://www.xtremegate.com>.